




PROFORCE V2 TOUR FLIGHT

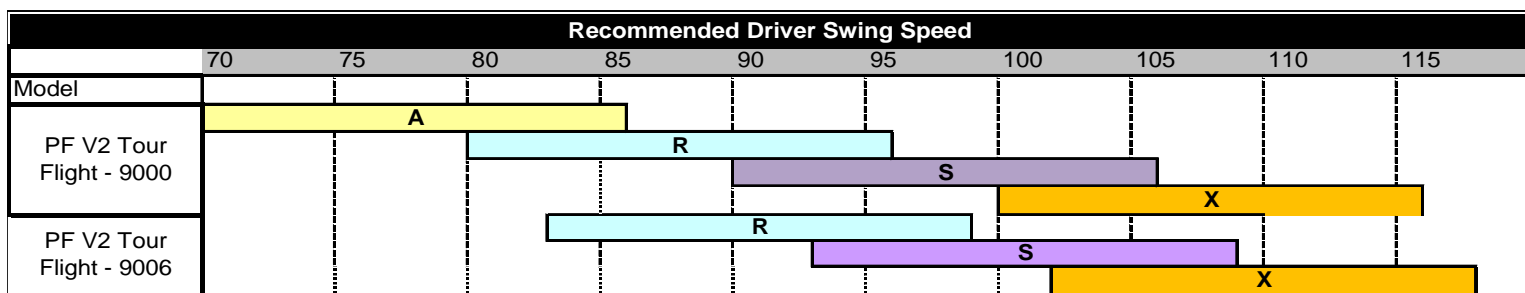

Wood Tip Trimming Recommendations				
Model	Driver	3 Wood	5 Wood	7 Wood
PF V2 Tour Flight - 9000	0"	1"	2"	2"
PF V2 Tour Flight - 9006				

Hybrid Tip Trimming Recommendations				
Model	#1 Replacement	#2 Replacement	#3 Replacement	#4 Replacement
PF V2 Tour Flight - 9000	1"	1.5"	2.0"	2.5"
PF V2 Tour Flight - 9006				

PF V2 Tour Flight - 9000/9006												
SwingWt.	C5	C6	C7	C8	C9	D0	D1	D2	D3	D4	D5	D6
40.5 in	222	224	226	228	230	232	234	236	238	240	242	244
41 in	218	220	222	224	226	228	230	232	234	236	238	240
41.5 in	214	216	218	220	222	224	226	228	230	232	234	236
42 in	210	212	214	216	218	220	222	224	226	228	230	232
42.5 in	206	208	210	212	214	216	218	220	222	224	226	228
43 in	202	204	206	208	210	212	214	216	218	220	222	224
43.5 in	198	200	202	204	206	208	210	212	214	216	218	220
44.0 in	194	196	198	200	202	204	206	208	210	212	214	216
44.5 in	190	192	194	196	198	200	202	204	206	208	210	212
45.0 in		188	190	192	194	196	198	200	202	204	206	208
45.5 in					190	192	194	196	198	200	202	204
46.0 in							190	192	194	196	198	200